



IRIS 600 TEST PROCEDURE

DE-POWER THE UNIT AND REMOVE FROM THE BASE.

REMOVE FLAME DETECTION CABLES FROM TERMINALS 1 AND 3

MAKE UP THE CIRCUIT AS ABOVE AND CONNECT TO TERMINALS 1 AND 3 IN THE BASE.

REFIT THE UNIT TO THE BASE AND RE-POWER THE UNIT

IF THE UNIT IS FUNCTIONING CORRECTLY THE BAR GRAPH DISPLAY SHOULD GO TO THE TOP ILLUMINATING ALL SEGMENTS